



Test fit parts before gluing! Wash parts with warm soapy water before starting. Use Cyano-Acrylate (superglue) to glue parts. Use hot water if you need to fix any warps. Lightly sand and prime resin parts before painting. Have fun!  
Check out [WWW.Aircraftresourcecenter.com](http://WWW.Aircraftresourcecenter.com) for tips on building models. Learn, teach and share pictures of your models at ARCs Discussion forum.

Warning! The raised bolt details on the mast are very fragile!  
Handle the part with extreme care to avoid breaking them off.

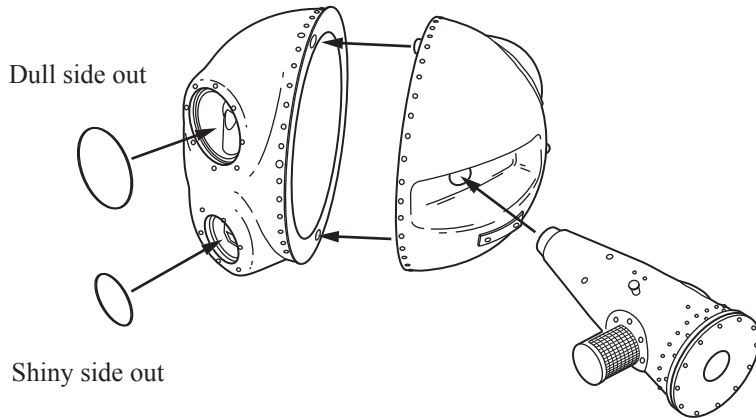

Lenses should be a tight enough fit that you don't need to glue them but you can use thinned white glue if you choose to.

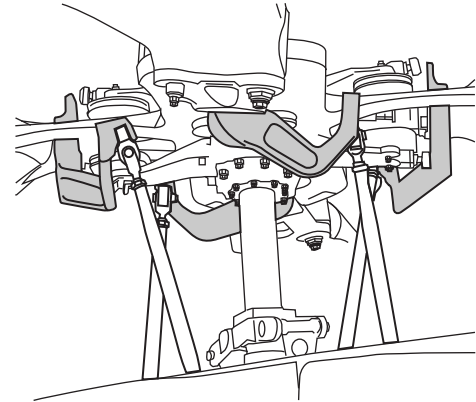

Replace kit provided pitch change horns (C28) with provided resin parts.  
Pitch change links (B49) should fit into the notches on the pitch change horns as shown.