

Test fit parts before gluing! Wash parts with warm soapy water before starting. Use Cyano-Acrylate (superglue) to glue parts. Use hot water if you need to fix any warps. Lightly sand and prime resin parts before painting. Have fun!
Check out WWW.Aircraftresourcecenter.com for tips on building models. Learn, teach and share pictures of your models at ARCs Discussion forum.


Install exhaust before attaching fins. Be sure to carefully align the fins. I would suggest attaching the rear fins first and using them as an alignment guide.

Use care, the fin is very thin in this area.

Cut here, snap off sprue, clean up edges and trim pin to length.

Note that the sharper angle faces forward

Some material may need to be removed here

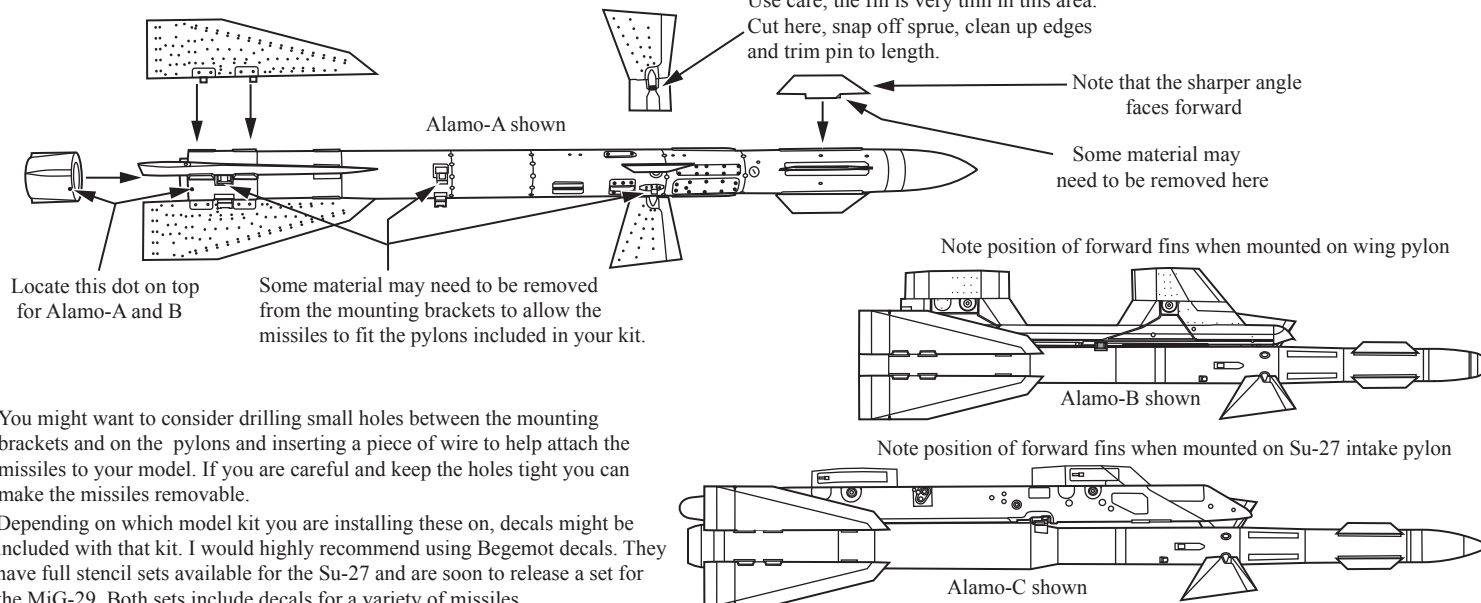

Locate this dot on top for Alamo-A and B

Some material may need to be removed from the mounting brackets to allow the missiles to fit the pylons included in your kit.

You might want to consider drilling small holes between the mounting brackets and on the pylons and inserting a piece of wire to help attach the missiles to your model. If you are careful and keep the holes tight you can make the missiles removable.

Depending on which model kit you are installing these on, decals might be included with that kit. I would highly recommend using Begemot decals. They have full stencil sets available for the Su-27 and are soon to release a set for the MiG-29. Both sets include decals for a variety of missiles.