

# Zactomodels

www.Zactomodels.com

Detail parts for the  
Revell 1/144 F-15E kit

© 2012 Zactomodels

Test fit parts before gluing!

Wash parts with soapy water before starting.


Use Cyano-Acrylate (superglue) to glue parts.

Use warm water if you need to fix any warps.

Parts can be primed before painting.

Check out WWW.ARCAir.com for tips.

Join ARCs Discussion forum and have fun!

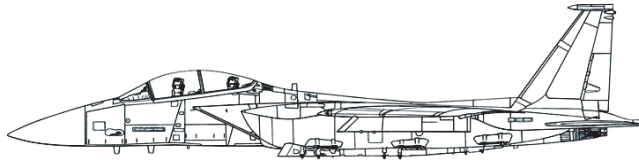

These parts are direct replacements for the kit parts so no special instructions are needed.

Ejection seats and exhausts are molded in dark gray to simplify painting. These parts can be left unpainted and dry-brushed with lighter shades to enhance the details.

Attach the ejection seats after assembling the rest of the cockpit.

Attach the exhausts after assembling the rest of the model.

Open holes (#75 bit, .021") in lower fuselage for centerline pylon.

The AN/ALQ-131 ECM pod is included for those who wish to model an F-15DJ. This pod is not used on the F-15E.