


Dry fit, dry fit, dry fit! Make the parts fit before gluing! Wash parts with warm soapy water before starting.

Avoid breathing dust created while sanding. Use Cyano-Acrylate (superglue) to glue parts.

Use care, the thin parts are brittle. Use hot water if you need to fix any warps. Have fun!

Check out [WWW.Aircraftresourcecenter.com](http://WWW.Aircraftresourcecenter.com) for tips on building models. Learn, teach and share pictures of your models at ARCs Discussion forum.

Optional FOD guard  
included so you don't  
have to deal with that  
nasty seam!

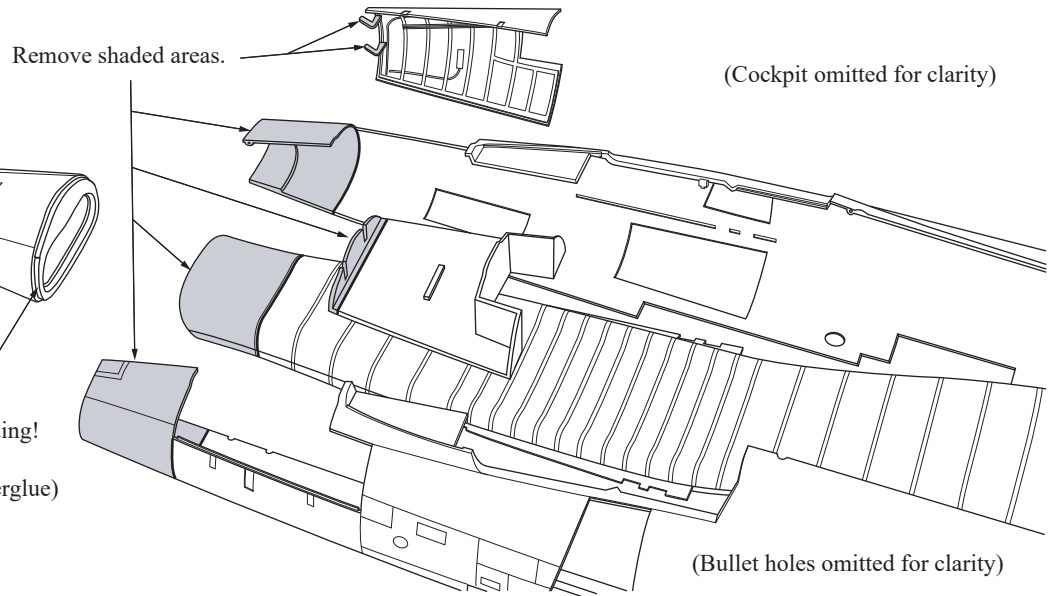

Eliminate any mismatch before gluing!  
Remove material if there is a step.  
Add material (small bumps of superglue)  
if there is void between the parts.